Installation Instruction

Single Lever Kitchen Faucet With Pull-out Sprayer



REAL THE REAL PROPERTY OF THE PROPERTY OF THE

Before Your Installation

Check to make sure you have the following parts indicated below:



Tools You Will Need



Small spanner (Supplied)



Tools for loosening the hexagon nut (supplied)




Adjustable wrench



Phillips screwdriver

Replacement Parts


Keep this manual for ordering replacement parts.

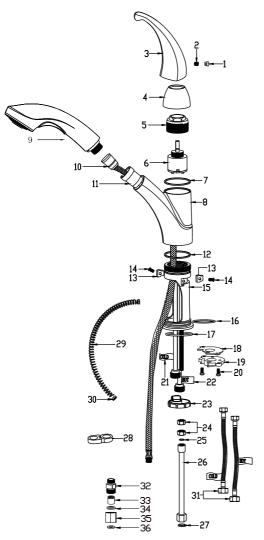



NO NAME

- 1. Cover cap
- 2. Screw
- 3. Handle
- 4. Cartridge holder
- 5. Lock nut
- 6. Cartridge
- 7. Gasket against friction
- 8. Facuet body
- 9. Pull-out spout
- 10. Black nylon hose
- 11. Spout holder
- 12. Gasket against friction
- 13. Noice muffler
- 14. Screw
- 15. Cartridge holder
- 16. O-ring
- 17. O-ring
- 18. Rubber gasket
- 19. Stainless steel gasket
- 20. Screw
- 21. Blue label
- 22. Red label
- 23. Flexible holder
- 24. Hexagon nut
- 25. O-ring
- 26. Extension for flexible hose
- 27. Flat gasket
- 28. Spring holder
- 29. Spring
- 30. Anti-friction cover
- 31. Hose
- 32. Bushing(male thread)
- 33. Check valve
- 34. Gasket
- 35. Bushing(female thread)
- Gasket

Product Dimension Drawing

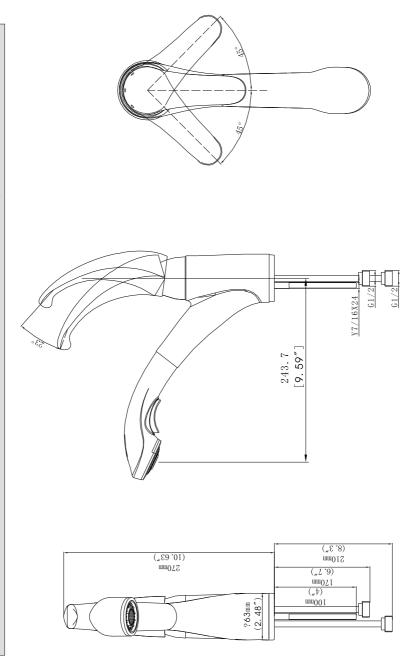

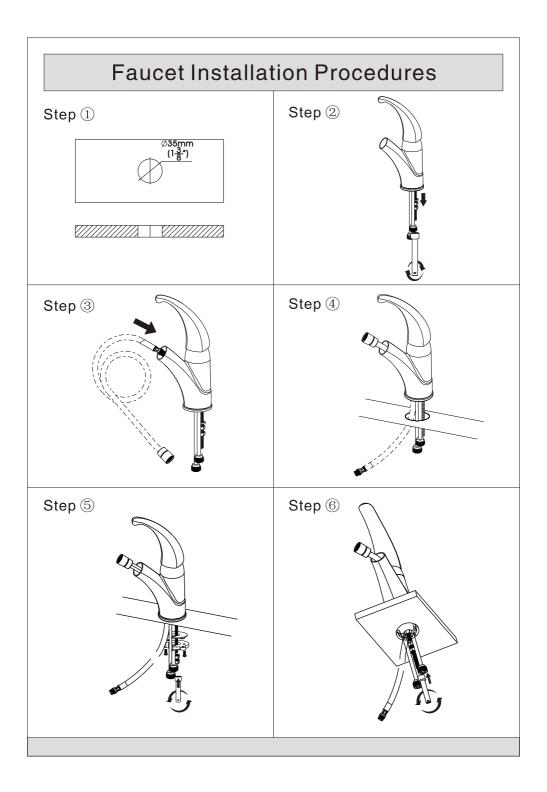

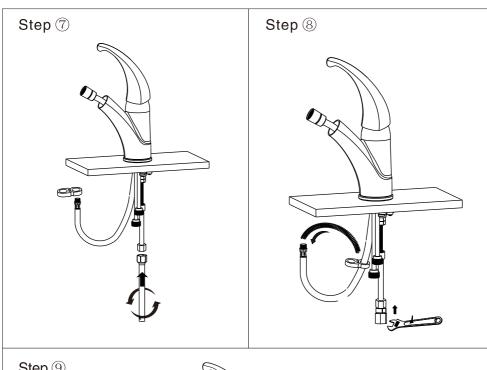



IMPORTANT!

Flush debris from the Hot and Cold angle valves by:

- 1. Connect water supply line to the angle valve.
- 2. Put the other end of the water supply line into a bucket and turn on water to flush.
- 3. Repeat step 2 with the other supply line.
- 4. Connect the Hot and Cold water lines to the faucet. Tighten securely, but do not overtighten.





